


MEASURE FOR DOUBLE ACTION HINGED GLASS DOORS – Single doors and Double doors

The surface/wall(s) need to be square and plumb.

If the measurements deviate by more than 4mm you should consider changing the opening

The surface/wall needs to be flush along the whole length where the glass will fit and open – ie NO SKIRTING BOARD

WIDTH

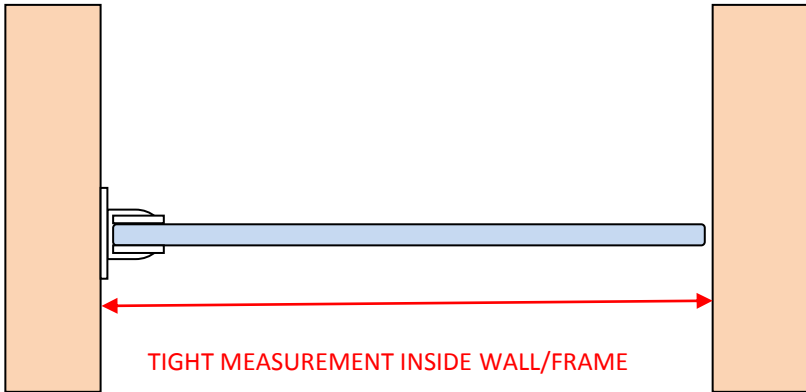


TIGHT MEASUREMENT INSIDE WALL/FRAME

Make sure there are no obstructions such as skirting board

Measure in at least three places	
TOP
MIDDLE
BOTTOM

HEIGHT

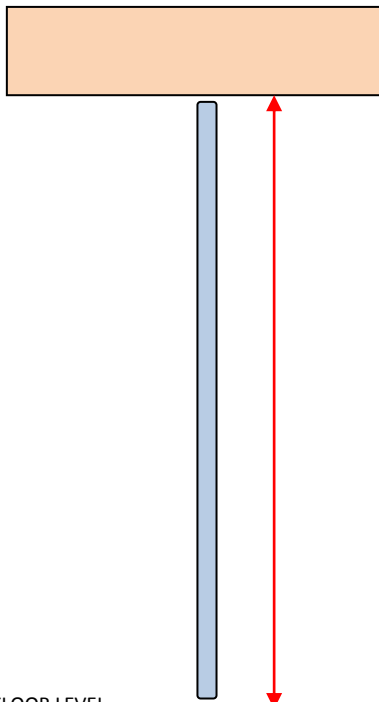

TIGHT MEASUREMENT FROM INSIDE FRAME HEAD TO FINISHED FLOOR

Make sure there are no obstructions ie. bumps in the floor

FINISHED FLOOR LEVEL

Measure in at least three places	
LEFT
MIDDLE
RIGHT

IMPORTANT NOTES:

Height - make sure there are no obstructions ie. Bumps in the floor/sloping floor

Width - make sure there are no obstructions such as skirting boards

Fixing surfaces need to be solid, so that good, sound fixing for hinges can be obtained

FROM THE TIGHT MEASUREMENTS WE WILL USE THE SMALLEST SIZE AND MAKE THE APPROPRIATE ALLOWANCES FOR CLEARANCES BASED ON YOUR CHOICE OF HARDWARE.